










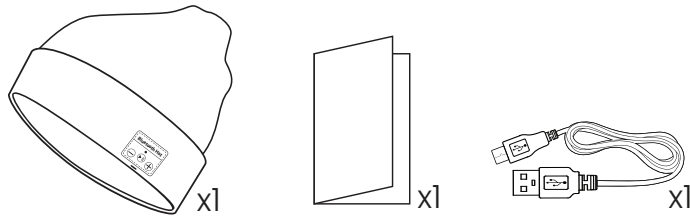

ULTRICS Bluetooth Beanie

User Guide


Package Contains




Control:

Power On/Off	 >3s	Press and hold for 3 seconds
Play/Pause Music	 x1	Press once when connected to a device
Volume Up/Down	 	Press and hold during music playback
Next Track	 x1	Press once during music playback
Previous Track	 x1	Press once during music playback
Answer/End Phone Call	 x1	Press once when phone rings
Redial	 x2	Quickly press twice

 
Functions:

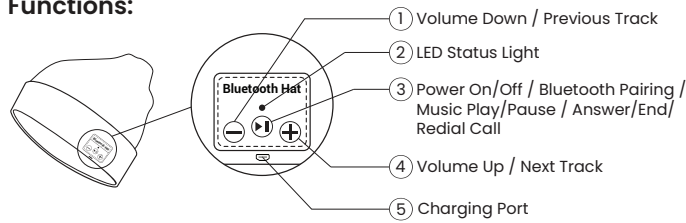

 How to Turn On/Off the Bluetooth Beanie:

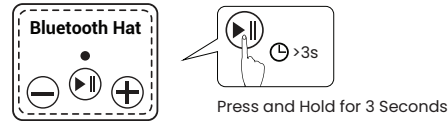


How to Charge the Bluetooth Beanie:

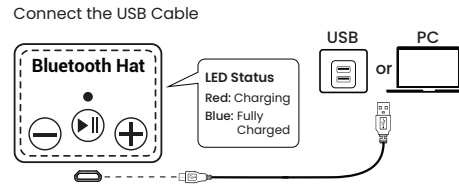 


Safety Notes

- Do not leave the hat to charge for more than 2 hours. Doing so can shorten the life span of the product.
- Remove the speakers and Bluetooth module before washing the beanie hat
- The music hat comes with a non-changeable internal battery, don't open, disassemble or remove it.
- Never keep the Bluetooth hat in/near any heat sources.
- Do not keep it in an unventilated vehicle under direct sunlight.
- Ensure the ambient temperature is above 0° and below 40° during charging.
- Keep the product out of the reach of infants and kids.


How to Pair with Your Device:

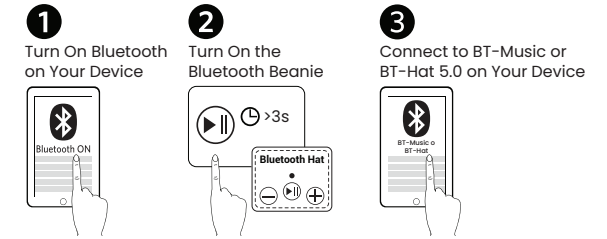

LED Status	Function
Rapidly flashing blue and red	Waiting to be paired
Slowly flashing blue	Connected to a device

 When turned on, the Bluetooth Beanie will automatically connect to the last connected device if available. If there is no previously connected device, it will enter the pairing mode.

How to Wash the Beanie:

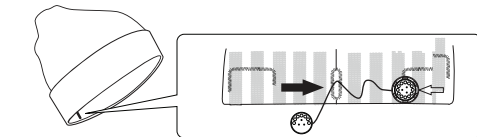

- 1 Gently remove the speakers and Bluetooth module from the double layer pockets inside the hat.
- 2 Wash the beanie with cold water, and then air-dry.
- 3 Reinstall the speakers and Bluetooth module back to the original position. Make sure the buttons are aligned with the control panel.



ultrics.uk